










 





 












Original	Recharge
 Power	 Power
 TV / AV	 AV / Input / RDS
 TV/TXT	 Text / Goto
 Cancel	 Shift + Exit / Cancel / Clear
 Reveal	 Display / Media
 DTV	 D.Menu / Top
 Hold	 Stop / Hold
 Size	 Shift + Zoom /
 Subpage	 Eject / Surround
 Index	 Smart / List
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 CH+	 CH+ / Page+
 Menu	 Menu / Home
 Vol+	 Vol+

Original	Recharge
 CH-	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Vol-	 Vol-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





Original		Rechange	
	.		TV/Radio /
	0		0
	Recall		Back / Return
	Picture		Picture / Format
	Sound		Sound / Title
	I/II		Audio / Lang I/II
	Mute		Mute / Dimmer
	Sleep		Sleep / Timer
	Info		Info / Angle
	Zoom		Zoom / Size
	Freeze		Pause / Step / Freeze
	EPG		Guide / EPG / -/--
	FAV List		Fav / Marker / PC
	FAV ADD		I<< / Preset-
	FAV >>I		>>I / Preset+
	Subtitle		Subtitle / EQ
	Time	+	Shift + Sleep / Timer

Original		Rechange	
	Quick Start		Setup / OPT /

