



Original		Rechange		Original		Rechange	
	Power		Power		Green / Pause		Green
	Mute		Mute		Green / Pause		Pause
	V+		Vol +		Yellow / SUB		Yellow
	V-		Vol -		Yellow / SUB		Subt
	AV		AV		Blue / Text		Blue
	P+		Ch +		Blue / Text		Text
	P-		Ch -		FAV		Pre Ch
	Audio		Dual		TV/R		TV/R
	Menu		Menu		EPG		Guide
	Info		Info		1		1
	Exit		Exit		2		2
	Up / Channel+		Up		3		3
	Down /		Down		4		4
	Right / Vol+		Right		5		5
	Left / Vol-		Left		6		6
	OK		Ok		7		7
	Red / RCL		Red		8		8



