 


 

 

 






 





 

 


 










 

 

 











 








Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 Red/Sub.	 Red / Netflix / Search
 Green/TTX	 Green / APP / Repeat
 Yellow/Audio	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 EPG	 Guide / EPG / -/--
 Info	 Info / Angle
 Tv/Radio	 TV/Radio /
 Rec	 Rec / Rec Mode
 DTV	 Smart / List
 Video	 Shift + 4
 Music	 Audio / Lang I/II
 Picture	 Picture / Format
 APP	 Shift + Green / APP /
 Setting	 Setup / OPT /
 Web	 Display / Media

Original	Recharge
 Goto	 Text / Goto
 Home	 Shift + Menu /
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Del	 Exit / Cancel / Clear
 >>	 >>  / Preset+
 Vol+	 Vol+
 >>	 >> / Tune+
  <<	  << / Preset-
 Vol-	 Vol-
 <<	 << / Tune-
 1	 1





Original		Recharge		Original		Recharge	
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	0		0				
	Stop		Stop / Hold				

