



Original	Rechange
Eject	Eject / Surround
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
A.Sel	D.Menu / Top
0	0
AV	AV / Input / RDS
>> 30	>>I / Preset+
Play	Play / Slow
Pause	Pause / Step / Freeze

Original	Rechange
<<	<< / Tune-
>>	>> / Tune+
Rec	Rec / Rec Mode
Stop	Stop / Hold
I>	I<< / Preset-
Prog	TV/Radio /
SP/LP	Setup / OPT /
PR+	CH+ / Page+
PR+	Up
Menu	Menu / Home
[A]	Text / Goto
←	Left
OK	OK
→	Right
Index-	Vol-
Index+	Vol+
PR-	CH- / Page-









Original	Recharge	Original	Recharge
 PR-	 Down		
 TV/VCR	 Display / Media		
 PAL/SEC	 Picture / Format		





Original	Rechange
 Eject	 Eject / Surround
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 A.Sel	 D.Menu / Top
 0	 0
 AV	 AV / Input / RDS
 >>30	 >>I / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Original	Rechange
 <<	 << / Tune-
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 I>	 I<< / Preset-
 SV/V+	 TV/Radio /
 SP/LP	 Setup / OPT /
 Up/PR+	 CH+ / Page+
 Up/PR+	 Up
 Menu	 Menu / Home
 [A]	 Text / Goto
 Left	 Left
 OK	 OK
 Right	 Right
 Index-	 Vol-
 Index+	 Vol+
 Down/PR-	 CH- / Page-

 










 













Original		Rechange		Original		Rechange	
	Down/PR-		Down				
	Tv/VCR		Display / Media				
	PAL/SEC		Picture / Format				







 



Original	Rechange
 Eject	 Eject / Surround
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 A.Sel	 D.Menu / Top
 0	 0
 AV	 AV / Input / RDS
 >>30	 >>I / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Original	Rechange
 <<	 << / Tune-
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 I>	 I<< / Preset-
 SV/V+	 TV/Radio /
 SP/LP	 Setup / OPT /
 Down/PR-	 CH- / Page-
 Up/PR+	 Up
 Menu	 Menu / Home
 [A]	 Text / Goto
 Left	 Left
 OK	 OK
 Right	 Right
 Index-	 Vol-
 Index+	 Vol+
 Up/PR+	 CH+ / Page+





Original		Rechange	
	Down/PR-		Down
	Tv/VCR		Display / Media
	PAL/SEC		Picture / Format

Original		Rechange	

