 
 
 
 
 
 

 

 
 
 
 
 


 
 
 

 
 
 






	Original	Rechange		Original	Rechange
	Power		Power		8
	Mute		Mute		9
	Vol+		Vol +		0
	Vol-		Vol -		Shift + Guide
	Prog+		Ch +		PRE
	Prog-		Ch -		Pre Ch
	[≡]/TXT		Text		Up/P+
	[+]/Display		Info		Down/P-
	Tv/DVB-T		Smart		Right/Vol+
	[ ]/Line		Media		Left/Vol-
	1		1		[II]/Tv Menu
	2		2		-IXI-/Exit
	3		3		Timer/Sleep
	4		4		Shift + Format
	5		5		Shift + Dual
	6		6		Format
	7		7		Open/Close
					Rec





Original	Rechange	Original	Rechange
 Stop	 Stop	 [ /≡]/Audio	 Dual
 Play	 Play	 [≡♦]/Subtitle	 Subt
 Pause	 Pause	 [≡?]/Goto	 Options
 <</< Slow	 <<	 [≡+]/Program/Me	 TV/R
 Slow >/>>	 >>	 [<≡]/List/Angle	 Shift + Ch -
  <</<  Step	  <<	 [≡>]/Bookmark/O	 Shift + Ch +
 Step  >/>>	 >>	 [≡o]/Zoom/EPG	 Guide
 Red/Setup	 Red	 [≡X]/Cancel/i	 3D
 Green/Input	 Green	 MS	 Back
 Yellow/Title	 Yellow	 [▼]/Still	 AV
 Blue/Menu	 Blue	 OK	 Ok
 PIP On/Off	 Shift + 3D		
 PIP Source	 Shift + AV		
 PIP Sound	 Shift + TV/R		
 PIP Swap	 Shift + Subt		
 Timer/repeat	 Shift + Text		
 [≡i]/A-B	 Shift + Info		

