


 





 
 


 



 
 


 



















 





 

 
 
 










 


 






Original		Rechange		Original		Rechange	
	Power		Power		Sound		Dual
	Source		AV		PRG +		Ch +
	TV		TV/R		PRG -		Ch -
	1		1		Up		Up
	2		2		Down		Down
	3		3		Right		Right
	4		4		Left		Left
	5		5		Vol +		Vol +
	6		6		Vol -		Vol -
	7		7		CTRL		Media
	8		8		Mute		Mute
	9		9		Exit		Exit
	0		0		Size / Audio		Shift + Dual
	Text		Text		Still / Subt		Subt
	Info		Info		PIP / REP		Options
	Menu		Menu		Focus / A-B		Eject
	Picture		Format		Normal / Title		Ok





Original	Rechange
CVBS1	CVBS1
CVBS2	CVBS2
CVBS3	CVBS3
YPbPr	YPbPr
YC1	YC1
YC2	YC2
PC	PC
HDMI	HDMI
[≡?]/MTS	[≡?]/MTS
[≡]/Sleep	[≡]/Sleep
[≡i]/Time	[≡i]/Time
[≡+]/PREPG	[≡+]/PREPG
Red / Delete	Red / Delete
Green / Skip	Green / Skip
Yellow / Insert	Yellow / Insert
Blue / Replace	Blue / Replace

Original	Rechange

