

 

 



 



 



 

 

 



 



 



 



 



 







 

 





 















Original		Rechange		Original		Rechange	
	Power		Power		Index		D.Menu / Top
	Mute		Mute / Dimmer		Reveal		Setup / OPT /
	Play		Play / Slow		Text		Text / Goto
	Pause		Pause / Step / Freeze		AV/Source		AV / Input / RDS
	Stop		Stop / Hold		Menu		Menu / Home
	Rec		Rec / Rec Mode		Up		Up
	<<		<< / Tune-		i/Info		Info / Angle
	>>		>> / Tune+		Left		Left
	I<<		I<< / Preset-		OK		OK
	>>I		>>I / Preset+		Right		Right
	S.Mode		Sound / Title		Exit		Exit / Cancel / Clear
	Audio		Audio / Lang I/II		Down		Down
	Subtitle		Subtitle / EQ		Back		Back / Return
	P.Mode		Picture / Format		Vol+		Vol+
	Size		Zoom / Size		Rec List		Smart / List
	Sleep		Sleep / Timer		CH+		CH+ / Page+
	Tv/Radio		TV/Radio /		Vol-		Vol-





Original	Rechange	Original	Rechange
ATV	Display / Media	Blue	Blue / Prime Video / Random
CH-	CH- / Page-	Power/Display	+ Shift + Power
1	1	Hold	+ Shift + Stop /
2	2	Aspect	+ Shift + Picture / Format
3	3	USB	+ Shift + 8
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
Tv Guide	Guide / EPG / -/--		
0	0		
FAV	Fav / Marker / PC		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		

