

 

 

 
 






Original	Rechange	Original	Rechange
 Power	 Power	 OK	 Ok
 Mute	 Mute	 Vol+	 Vol +
 TV	 Smart	 Vol-	 Vol -
 Tv/Rad	 TV/R	 Red/Multi Feed	 Red
 Audio	 Dual	 Green	 Green
 Aspect	 3D	 Yellow	 Yellow
 USB	 Media	 Blue/Timer	 Blue
 FAV	 Pre Ch	 EPG	 Guide
 Exit	 Exit	 Info	 Info
 Menu	 Menu	 Text	 Text
 Back	 Back	 1	 1
 P+	 Ch +	 2	 2
 P-	 Ch -	 3	 3
 Up	 Up	 4	 4
 Down	 Down	 5	 5
 Right	 Right	 6	 6
 Left	 Left	 7	 7





Original	Rechange	Original	Rechange
 8	 8		
 9	 9		
 0	 0		
 SUB	 Subt		
 Format	 Format		

