





 





 





 
 
 

 

 







 





Original	Recharge
 Power	 Power
 SAT	 AV
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Texts	 Smart
 Back	 Back
 Vol +	 Vol +
 Vol -	 Vol -

Original	Recharge
 Menu	 Menu
 Exit	 Exit
 Guide	 Guide
 CH +	 Ch +
 CH -	 Ch -
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Page Down	 Shift + Ch -
 Page Up	 Shift + Ch +
 Info	 Info
 Subtitle	 Subt
 Audio	 Dual
 Check	 Shift + Ok
 Red	 Red





Original		Rechange		Original		Rechange	
	Green		Green		I<<		I<<
	Yellow		Yellow		>>I		>>I
	Blue		Blue		List		List
	Res		Format		Zoom		Eject
	Sleep		Sleep		Mark		Pre Ch
	TV / Radio		TV/R				
	Text		Text				
	Play		Play				
	Stop		Stop				
	Pause		Pause				
	Rec		Rec				
	Repeat		Shift + Text				
	Step		Shift + Pause				
	<<		<<				
	>>		>>				
	Picture		Shift + Format				
	Play Text		Shift + Play				

