





 





 





 
 
 

 

 







 





Original	Recharge	Original	Recharge
	Power		Power
	SAT		AV
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Texts		Smart
	Back		Back
	Vol +		Vol +
	Vol -		Vol -

Original	Recharge	Original	Recharge
	Menu		Menu
	Exit		Exit
	Guide		Guide
	CH +		Ch +
	CH -		Ch -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Page Down		Shift + Ch -
	Page Up		Shift + Ch +
	Info		Info
	Subtitle		Subt
	Audio		Dual
	Check		Shift + Ok
	Red		Red





Original		Rechange		Original		Rechange	
	Green		Green		I<<		I<<
	Yellow		Yellow		>>I		>>I
	Blue		Blue		List		List
	Res		Format		Zoom		Eject
	Sleep		Sleep		Mark		Pre Ch
	TV / Radio		TV/R				
	Text		Text				
	Play		Play				
	Stop		Stop				
	Pause		Pause				
	Rec		Rec				
	Repeat		Shift + Text				
	Step		Shift + Pause				
	<<		<<				
	>>		>>				
	Picture		Shift + Format				
	Play Text		Shift + Play				

