

















 







 





















 



 


 
 







 







Original	Recharge	Original	Recharge
 Ouvrir/Fermer	 Eject / Surround	 8	 8
 Video/Y	 AV / Input / RDS	 9	 9
 Marche	 Power	 Sous Titre	 Subtitle / EQ
 Menu	 Menu / Home	 Annul	 Exit / Cancel / Clear
 Mode	 Smart / List	 0	 0
 Affichage	 Display / Media	 10+	 Guide / EPG / -/-
 NTSC/PAL	 Picture / Format	 Config	 Setup / OPT /
 Chercher	 Red / Netflix / Search	 Retour	 Back / Return
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 Valider	 OK
 Angle	 Info / Angle	 Right	 Right
 4	 4	 Arrêter	 Stop / Hold
 5	 5	 Down	 Down
 6	 6	 Zoom	 Zoom / Size
 Titre	 Sound / Title	 Pause	 Pause / Step / Freeze
 7	 7	 Lecture	 Play / Slow





Original		Rechange	
	Volume-		Vol-
	Volume+		Vol+
	<I Ralenti		CH- / Page-
	Ralenti I>		CH+ / Page+
	I<< Chapitre		I<< / Preset-
	Chapitre >>I		>>I / Preset+
	Ret.Rap		<< / Tune-
	AV.Rap		>> / Tune+
	Rpt A-B		Yellow / YouTube / Repeat
	Repeter		Green / APP / Repeat
	Audio		Audio / Lang I/II
	Langue		Shift + Audio / Lang I/II
	3D		Shift + 3
	Silence		Mute / Dimmer

Original		Rechange	

