


 
 





Original	Rechange
 Power	 Power
 PREMIUM NET	 Smart
 Guida	 Guide
 Menu	 Menu
 Info	 Info
 Vol +	 Vol +
 Vol -	 Vol -
 P +	 Ch +
 P -	 Ch -
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Red	 Red
 Green	 Green
 Yellow	 Yellow

Original	Rechange
 Blue	 Blue
 Back	 Back
 Exit / Stop	 Exit
 Exit / Stop	 Stop
 << REW	 <<
 >> FWD	 >>
 Pause / Play	 Play
 Pause / Play	 Pause
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





Original		Rechange		Original		Rechange	
	0		0				
	Lista		List				
	Opzioni		Options				
	Text		Text				
	TV / Rad		TV/R				
	APP		Shift + Media				
	Source		AV				
	I<< Prev		I<<				
	Rec		Rec				
	File		Media				
	>>I Next		>>I				

