



 



 



 



 











 

 





 



 

 





 



 

 

 





 

 







Original		Rechange		Original		Rechange	
	Power		Power		Vol+		Vol+
	Energy Saving		Eject / Surround		FAV/Mark		Fav / Marker / PC
	AV Mode		Picture / Format		P+		CH+ / Page+
	Input		AV / Input / RDS		Vol-		Vol-
	Tv/Rad		TV/Radio /		Ratio		Display / Media
	1		1		P-		CH- / Page-
	2		2		Mute		Mute / Dimmer
	3		3		Menu		Menu / Home
	4		4		Guide		Guide / EPG / -/-
	5		5		Q.Menu		D.Menu / Top
	6		6		Up		Up
	7		7		Left		Left
	8		8		OK		OK
	9		9		Right		Right
	List		Smart / List		Down		Down
	0		0		Back		Back / Return
	Q.View		Setup / OPT /		Info		Info / Angle





Original	Recharge	Original	Recharge
 Exit	 Exit / Cancel / Clear		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Text	 Text / Goto		
 T.Opt	 Shift + Setup / OPT / Tools		
 Subtitle	 Subtitle / EQ		
 Stop	 Stop / Hold		
 Play	 Play / Slow		
 Pause/Freeze	 Pause / Step / Freeze		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Simplink	 Sound / Title		
 AD	 Audio / Lang I/II		

