




Original	Rechange
Mute	Mute / Dimmer
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
16:9	Picture / Format
0/FAV	Fav / Marker / PC
0/FAV	0
[O]/Repeat	Shift + Green / APP /
Vol+	Vol+
Input	AV / Input / RDS

Original	Rechange
P+	CH+ / Page+
Vol-	Vol-
EPG/?/A-B	Shift + Yellow / YouTube /
EPG/?/A-B	Guide / EPG / -/--
P-	CH- / Page-
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Q/Double	Shift + Red / Netflix /
M	Menu / Home
←	Back / Return
i	Info / Angle
Red	Red / Netflix / Search
Play/Pause	Play / Slow
Green	Green / APP / Repeat





Original		Recharge		Original		Recharge	
	<<		<< / Tune-				
	Yellow		Yellow / YouTube / Repeat				
	Stop		Stop / Hold				
	Blue		Blue / Prime Video / Random				
	>>		>> / Tune+				
	I<<		I<< / Preset-				
	TXT		Text / Goto				
	>>I		>>I / Preset+				
	[...]		Subtitle / EQ				
	Audio		Audio / Lang I/II				

