



Original	Recharge
Power	Power
Open / Close	Eject / Surround
Mode	Setup / OPT /
Menu	Menu / Home
Bluetooth	Shift + 9
Dimmer	Shift + Mute / Dimmer
Clock	Shift + Sleep / Timer
Alarm	Smart / List
Sleep	Sleep / Timer
Snooze	Display / Media
Info	Info / Angle
Intro	Text / Goto
Folder Down	CH- / Page-
Folder Up	CH+ / Page+
Stop	Stop / Hold
Play / Pause	Play / Slow
<<	<< / Tune-

Original	Recharge
>>	>> / Tune+
Random	Blue / Prime Video / Random
Up	Up
Repeat	Green / APP / Repeat
Left	Left
OK	OK
Right	Right
A-B	Yellow / YouTube / Repeat
Down	Down
Mute	Mute / Dimmer
POP	Shift + 1
Vol+	Vol+
Classic	Shift + 3
Rock	Shift + 2
Vol-	Vol-
Flat	Shift + 4
1	1





Original		Recharge		Original		Recharge	
2	2	DVD 2	2				
3	3	CD - STB 3	3				
4	4	VIDEO 4	4				
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
SCAN	Scan	TOP MENU D.MENU	D.Menu / Top				
0	0	HDMI - BAT 0	0				
PROG	Prog	PROGRAM TV/RADIO	TV/Radio /				

