

 
 

 

 



 

 



 





 


 
 















 



 

 







 















Original		Recharge		Original		Recharge	
	Power		Power		TXT/MIX		Text
	Sleep		Sleep		Play		Play
	Mute		Mute		Pause		Pause
	Mode		Media		Stop		Stop
	1		1		Rec		Rec
	2		2		>>/Index		>>
	3		3		<</Hold		<<
	4		4		I<<		I<<
	5		5		>>I		>>I
	6		6		Cancel		Exit
	7		7		Menu		Menu
	8		8		DTV/Radio		TV/R
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	-/--	 + 	Shift + Guide		Up		Up
	Back		Back		Down		Down
	Nicam/A2		Dual		Right		Right







 













 
 


Original	Rechange	Original	Rechange
	Left		FAV-
	Enter		Shift + Ch -
	CH+		
	CH-		
	FAV		
	EPG		
	Info		
	List		
	Red		
	Green		
	Yellow		
	Blue		
	Size		
	Reveal		
	Subtitle		
	Subpage		
	FAV+		Shift + Ch +



 




 



 



Original	Recharge	Original	Recharge
Power		Power	Power
Mute		Mute	Mute
[I]/Menu		Menu	Menu
Exit		Exit	Exit
Source		AV	AV
1		1	1
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7
8		8	8
9		9	9
0		0	0
Subtitle		Subt	Subt
Text		Text	Text

Original	Recharge	Original	Recharge
Vol+		Vol +	Vol +
Vol-		Vol -	Vol -
CH+		Ch +	Ch +
CH-		Ch -	Ch -
Up		Up	Up
Down		Down	Down
Right		Right	Right
Left		Left	Left
OK		Ok	Ok
Recall		Back	Back
Info		Info	Info
EPG		Guide	Guide
Freeze		Options	Options
Red		Red	Red
Green		Green	Green
Yellow		Yellow	Yellow
Blue		Blue	Blue





Original	Recharge	Original	Recharge
Audio	 Dual		
I<</[≡+]	 I<<		
>>I/[≡..]	 >>I		
[≡i]	 Smart		
Play	 Play		
Pause	 Pause		
Stop	 Stop		
REP/Rec	 Rec		
<</[≡o]	 <<		
>>/[≡?]	 >>		
FAV	 Pre Ch		

