
























 

 






 






Original	Rechange
 Power	 Power
 TV	 TV/R
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Sleep / Zoom	 Sleep
 Sleep / Zoom	 Eject
 Last / Slideshow	 Back
 Vol +	 Vol +

Original	Rechange
 Vol -	 Vol -
 Mute	 Mute
 TTX	 Text
 Audio I/II	 Dual
 P +	 Ch +
 P -	 Ch -
 Up	 Up
 Left	 Left
 OK / Play/Pause	 Ok
 OK / Play/Pause	 Play
 OK / Play/Pause	 Pause
 Right	 Right
 Down	 Down
 Display	 Info
 Menu	 Menu
 Red / FAV 1	 Red
 Green / FAV 2	 Green





Original	Rechange	Original	Rechange
Yellow / FAV 3	Yellow		
Green / FAV 4	Blue		
Settings	Options		
Repeat	Shift + Text		
Stop / Wide	Stop		
Stop / Wide	Format		
I<< / Twin	I<<		
<< / Swap	<<		
<< / Swap	Pre Ch		
>>	>>		
>>I / Hold	>>I		

Original	Rechange	Original	Rechange

