










 










 




 
 


 













Original	Rechange	Original	Rechange
 Input	 AV / Input / RDS	 Left	 Left
 Power	 Power	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 EPG	 Guide / EPG / -/--
 3	 3	 Down	 Down
 4	 4	 Text	 Text / Goto
 5	 5	 Vol+	 Vol+
 6	 6	 Mute	 Mute / Dimmer
 7	 7	 P+	 CH+ / Page+
 8	 8	 Vol-	 Vol-
 9	 9	 I/II	 Display / Media
 Pro. List	 Smart / List	 P-	 CH- / Page-
 0	 0	 Red	 Red / Netflix / Search
 Last	 Back / Return	 Green	 Green / APP / Repeat
 Info	 Info / Angle	 Yellow	 Yellow / YouTube / Repeat
 Up	 Up	 Blue	 Blue / Prime Video / Random
 Menu	 Menu / Home	 [≡i]/Index	 Shift + AV / Input / RDS





Original	Recharge
MIX [/≡]/Mix	SHIFT + GOTO TEXT Shift + Text /
SIZE [≡◆]/Size	SIZE ZOOM Zoom / Size
SUBTITLE [≡B]/Subtitle	EQ SUBTITLE Subtitle / EQ
HOLD [≡+]/Hold	HOLD Stop / Hold
REVEAL [≡?]/Reveal	SHIFT + ANGLE INFO Shift + Info / Angle
SOUND (·)/Sound	TITLE SOUND Sound / Title
PIC []/Pict	FORMAT PICTURE Picture / Format
FAV ♥/FAV	PC FAV MARKER Fav / Marker / PC
FREEZE */Freeze	OPT-TOOLS SETUP Setup / OPT /
SLEEP Sleep	TIMER SLEEP Sleep / Timer
ASPECT [<>]/Aspect	TOP MENU D.MENU D.Menu / Top

Original	Recharge

