



Original		Rechange		Original		Rechange	
	Power		Power		8		8
	Open / Close		Eject		9		9
	TV / DTV		TV/R		-/--		Shift + Guide
	Line		AV		0		0
	DVD		Media		PRE		Pre Ch
	TTX		Text		Vol +		Vol +
	PIP ON / OFF		Shift + Power		Vol -		Vol -
	PIP Swap		Shift + Back		Prog +		Ch +
	PIP Source		Shift + AV		Prog -		Ch -
	PIP Sound		Shift + Dual		M/S		Subt
	1		1		Still		Shift + Pause
	2		2		Sleep		Sleep
	3		3		TV Menu		Menu
	4		4		P.STD		Format
	5		5		S.STD		Shift + Subt
	6		6		P.Size		Shift + Format
	7		7		Exit / Cancel		Exit





Original	Recharge
	
Up	Up
	
Right	Right
	
Down	Down
	
Left	Left
	
Enter	Ok
	
Mute	Mute
	
Display	Shift + Info
	
Stop	Stop
	
Play	Play
	
Pause	Pause
	
<<	<<
	
>>	>>
	
I<<	I<<
	
>>I	>>I
	
Red / Setup	Red
	
Green / Title	Green
	
Yellow / Menu	Yellow

Original	Recharge
	
Blue	Blue
	
Index Repeat	Shift + Text
	
MIX A-B	Shift + TV/R
	
L/F Audio	Dual
	
Size Subtitle	3D
	
Reveal Goto	Back
	
Hold / Program / Menu	Shift + Menu
	
Prepage / Angle / List	List
	
Next Page / Surround / Opt	Options
	
Subpage / Zoom / EPG	Guide
	
Store / Clear / i	Shift + Exit
	
Store / Clear / i	Info

