



Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 Lang	 Audio / Lang I/II
 Source (Games)	 Eject / Surround
 Movie-Music-Phot	 Picture / Format
 [≡]..	 Zoom / Size
 */O	 Sleep / Timer
 TV	 TV/Radio /
 Q.Menu	 D.Menu / Top
 [-O-]	 Setup / OPT /
 [≡]/Text	 Text / Goto

Original	Rechange
 Menu	 Menu / Home
 Up	 Up
 i	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 EXIT	 Exit / Cancel / Clear
 Down	 Down
 BACK	 Back / Return
 Vol+	 Vol+
 World (Violet)	 Smart / List
 PR+	 CH+ / Page+
 Vol-	 Vol-
 */Q	 Display / Media
 PR-	 CH- / Page-
 1./@	 1
 2abc	 2





Original	Recharge	Original	Recharge
3 def 3	CD - STB 3 3		
4 ghi 4	VIDEO 4 4		
5 jkl 5	TAPE 5 5		
6 mno 6	TUNER 6 6		
7 pqrs 7	AUX - HDD 7 7		
8 tuv 8	USB 8 8		
9 wxyz 9	BLUETOOTH 9 9		
Guide	Guide / EPG / -/--		
0	HDMI - BAT 0 0		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Recall	Shift + Back / Return		

Original	Recharge

