 






 
 

 
 


 
 
 

 
 


 




 


 
 

 
 


 
 


 
 

 
 
 
 

 

 

 




 

 
 



 
 





Original	Rechange	Original	Rechange
 Power	 Power	 +/16:9	 3D
 Input	 AV	 PP	 Back
 Mute	 Mute	 INST	 Options
 (I)	 Smart	 [≡i]/I-II	 Dual
 1	 1	 O	 Subt
 2	 2	 ?	 Guide
 3	 3	 X/(<>)	 TV/R
 4	 4	 Red/Picture	 Red
 5	 5	 Green/Sound	 Green
 6	 6	 Yellow/Timer	 Yellow
 7	 7	 Blue/Audio	 Blue
 8	 8	 Menu	 Menu
 9	 9	 Up	 Up
 0	 0	 Down	 Down
 [≡]	 Text	 Right	 Right
 P<P	 Pre Ch	 Left	 Left
 ◆/[+]	 Format	 P+	 Ch +





Original		Rechange		Original		Rechange	
	P-		Ch -				
	Vol+		Vol +				
	Vol-		Vol -				

