




 





Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 FAV	 Fav / Marker / PC
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0

Original	Rechange
 Back	 Back / Return
 Vol+	 Vol+
 CH List	 Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Aspect	 Shift + Picture / Format
 CH-	 CH- / Page-
 EPG	 Guide / EPG / -/--
 Audio	 Audio / Lang I/II
 Rec	 Rec / Rec Mode
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 Enter	 OK
 Right	 Right
 Source	 AV / Input / RDS





Original	Recharge	Original	Recharge
	Down		Hold
	Display		Subpage
	Red		Subtitle
	<<		Shift + Stop /
	Green		Eject / Surround
	>>		Subtitle / EQ
	Yellow		
	I<<		
	Blue		
	>>I		
	Text		
	Stop		
	Play		
	Pause		
	Index		
	Size		
	Reveal		
	Down		
	Display / Media		
	Red / Netflix / Search		
	<< / Tune-		
	Green / APP / Repeat		
	>> / Tune+		
	Yellow / YouTube / Repeat		
	I<< / Preset-		
	Blue / Prime Video / Random		
	>>I / Preset+		
	Text / Goto		
	Stop / Hold		
	Play / Slow		
	Pause / Step / Freeze		
	Info / Angle		
	Zoom / Size		
	D.Menu / Top		

