






Original	Recharge	Original	Recharge
 Power	 Power	 Start Debut +	 Green / APP / Repeat
 Review	 Setup / OPT /	 Stop Fin +	 Blue / Prime Video / Random
 Tv/VCR	 TV/Radio /	 Date+	 Vol+
 Audio	 Audio / Lang I/II	 PR+	 CH+ / Page+
 ---	 Smart / List	 Start Debut -	 Red / Netflix / Search
 1	 1	 Stop Fin -	 Yellow / YouTube / Repeat
 2	 2	 Date-	 Vol-
 3	 3	 PR-	 CH- / Page-
 4	 4	 Prog	 D.Menu / Top
 5	 5	 Timer/?	 Shift + Sleep / Timer
 6	 6	 I///	 Display / Media
 7	 7	 30 Sec/>>	 Back / Return
 8	 8	 <<	 << / Tune-
 9	 9	 Play	 Play / Slow
 X	 Exit / Cancel / Clear	 >>	 >> / Tune+
 0	 0	 Rec	 Rec / Rec Mode
 Timer	 Sleep / Timer	 Stop	 Stop / Hold



 

 





Original	Recharge	Original	Recharge
Pause	Pause / Step / Freeze		
Menu	Menu / Home		
OK	OK		
Up	Up		
Left/ <<-	Left		
Left/ <<-	<< / Preset-		
Right/ >> +	>> / Preset+		
Right/ >> +	Right		
Down	Down		





Original	Recharge
 Power	 Power
 TV/VCR	 AV / Input / RDS
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 Vol+	 Vol+
 Vol-	 Vol-

Original	Recharge

