





Original	Rechange
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 APP	 Shift + Green / APP /
 APP	 Display / Media
 0	 0
 Back	 Back / Return
 L-	 I<< / Preset-
 L+	 >>I / Preset+

Original	Rechange
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 CH+	 CH+ / Page+
 Down	 Down
 Vol+	 Vol+
 CH-	 CH- / Page-
 Vol-	 Vol-
 Info	 Info / Angle
 List	 Smart / List
 EPG	 Guide / EPG / -/-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat





Original	Rechange	Original	Rechange
	Blue Blue / Prime Video / Random		Blue / Prime Video / Random
	Audio Audio / Lang I/II		Audio / Lang I/II
	Subt Subtitle / EQ		Subtitle / EQ
	Text Text / Goto		Text / Goto
	Tv/Rad. TV/Radio /		TV/Radio /
	OPT Setup / OPT /		Setup / OPT /
	Still Pause / Step / Freeze		Pause / Step / Freeze
	Tv/AV AV / Input / RDS		AV / Input / RDS

Original	Rechange	Original	Rechange

