




 

 

 

 



 



 

 

 

 







 





 



 
 




 


















 


Original	Rechange
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 TV/AV	 AV
 Green/Timer	 Green
 Blue/QV	 Blue
 Red/[+]	 Red

Original	Rechange
 Yellow/V-PP	 Yellow
 Zoom	 Eject
 A-PP	 Media
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Menu	 Menu
 Menu	 Ok
 Reveal	 Options
 Size	 Format
 Mix	 TV/R
 TV/TXT	 Text



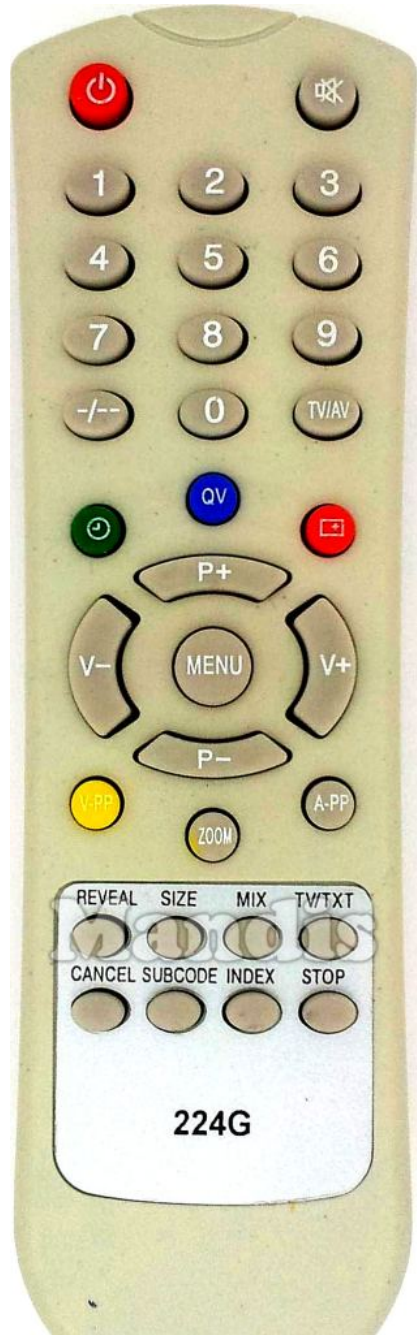

Original	Recharge	Original	Recharge
CANCEL 	Cancel	RETURN BACK 	Back
SUBCODE 	Subcode	AD SUBT 	Subt
INDEX 	Index	DISPLAY INFO 	Info
STOP 	Stop		Stop

