





 


 
 
 

 




 

 
 




 



 










 



 
 

 

 
 



 



 

 
 
 



 




Original		Rechange		Original		Rechange	
	Power		Power		Pause		Pause
	Radio/Input		AV		Scan >>		>>
	1		1		<< Scan		<<
	2		2		Skip >>		>>
	3		3		<< Skip		<<
	4		4		Rec		Rec
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		Mute		Mute
	8		8		Info/Display		Info
	9		9		Home		Smart
	0		0		Return		Back
	Clear		Exit		Disc Menu		D. Menu
	Repeat		Text		Title/PopUp		List
	Open/Close		Eject		Sound Effect		Dual
	Play		Play		Optical		Options
	Stop		Stop		Music ID		Subt





Original		Rechange	
	Enter		Ok
	Up/Preset+		Up
	Down/Preset-		Down
	Right/Tuning+		Right
	Left/Tuning-		Left
	Speaker Level		3D
	Sleep		Sleep
	Search		TV/R
	Marker		Format
	Red/RDS		Red
	Green/PTY		Green
	Yellow/PTY Search		Yellow
	Blue/Mono/Stereo		Blue
	Power TV		Shift + Power
	AV Input Tv		Media
	Vol+ Tv		Shift + Vol +
	Vol- Tv		Shift + Vol -

Original		Rechange	
	PR/CH+ Tv		Ch +
	PR/CH- Tv		Ch -

