



 

 





 



 
















 





 
 



 



 


 
 





 





 







Original	Recharge	Original	Recharge
 Power	 Power	 <<	 << / Tune-
 Disc Menu	 D.Menu / Top	 >>	 >> / Tune+
 Info/Display	 Info / Angle	 I<<	 I<< / Preset-
 Home	 Menu / HOME	 >>I	 >>I / Preset+
 Sleep	 Sleep / Timer	 Vol+	 Vol+
 Radio/Input	 TV/Radio /	 Vol-	 Vol-
 Open/Close	 Eject / Surround	 Sound Effect	 Audio / Lang I/II
 Up/Preset+	 Up	 Optical	 Subtitle / EQ
 Down/Preset-	 Down	 Speaker Level	 Setup / OPT /
 Right/Tuning+	 Right	 Mute	 Mute / Dimmer
 Left/Tuning-	 Left	 Repeat	 Green / APP / Repeat
 Enter	 OK	 Clear	 Exit / Cancel / Clear
 Return	 Back / Return	 Rec	 Rec / Rec Mode
 Marker	 Fav / Marker / PC	 *	 Blue / Prime Video / Random
 Play/Mono/Stereo	 Play / Slow	 1	 1
 Pause/Step	 Pause / Step / Freeze	 2	 2
 Stop	 Stop / Hold	 3	 3





Original		Recharge		Original	Recharge
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	RDS		Smart / List		
	PTY		Picture / Format		
	Power Tv		Shift + Power		
	PR/CH+ Tv		CH+ / Page+		
	PR/CH- Tv		CH- / Page-		
	AV Input Tv		AV / Input / RDS		
	Vol+ Tv		Shift + Vol+		
	Vol- Tv		Shift + Vol-		
	Title		Sound / Title		

