



Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / Sleep	 0
 0 / Sleep	 Sleep / Timer
 TV/Rad	 TV/Radio /
 TV / SAT	 AV / Input / RDS
 CH+	 CH+ / Page+
 CH-	 CH- / Page-

Original	Recharge
 Vol+	 Vol+
 Vol-	 Vol-
 Menu	 Menu / Home
 Recall	 Back / Return
 P+	 Shift + CH+ /
 P-	 Shift + CH- /
 Text	 Text / Goto
 Exit	 Exit / Cancel / Clear
 Fav	 Fav / Marker / PC
 EPG	 Guide / EPG / -/--
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Red / V-FMT	 Red / Netflix / Search
 Red / V-FMT	 Picture / Format





Original	Recharge	Original	Recharge
 Green	 Green / APP / Repeat	 II>	 Shift + Right
 Yellow	 Yellow / YouTube / Repeat	 Movie	 Smart / List
 Blue / Timer	 Blue / Prime Video / Random	 USB	 Shift + 8
 Blue / Timer	 Shift + Sleep / Timer	 USB	 Display / Media
 Info	 Info / Angle		
 Subt	 Subtitle / EQ		
 Audio	 Audio / Lang I/II		
 Find	 Shift + Red / Netflix /		
 Rec	 Rec / Rec Mode		
 Stop	 Stop / Hold		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 <II	 Shift + Left		

