











 



 







 



 



 

 




	Original	Recharge		Original	Recharge
	Power		Power		Play/Pause
	Mute		Mute		
	Home		Smart		
	Vol+		Vol +		
	Vol-		Vol -		
	Up		Up		
	Left		Left		
	OK		Ok		
	Right		Right		
	Down		Down		
	i		Info		
	:≡		Guide		
	Settings		Options		
	Settings		Menu		
	Stop		Stop		
	Rec		Rec		
	Play/Pause		Play		

