





















 

















































Original		Rechange		Original		Rechange	
	Power		Power		Vol+		Vol+
	Sub-T		Subtitle / EQ		FAV		Fav / Marker / PC
	Lang		Audio / Lang I/II		Down/CH-		Down
	Mute		Mute / Dimmer		Tv/Radio		TV/Radio /
	EPG		Guide / EPG / -/--		1		1
	Goto		Shift + Text /		2		2
	Page+		CH+ / Page+		3		3
	TTX		Text / Goto		Recall		Back / Return
	Repeat		Shift + Green / APP /		4		4
	Page-		CH- / Page-		5		5
	Menu		Menu / Home		6		6
	Up/CH+		Up		Info		Info / Angle
	Exit		Exit / Cancel / Clear		7		7
	Vol-		Vol-		8		8
	Left		Left		9		9
	OK		OK		0		0
	Right		Right		<<		<< / Tune-




















 




 















































Original	Rechange
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Play	Play / Slow
Pause/Time Shift	Pause / Step / Freeze
Stop	Stop / Hold
Rec	Rec / Rec Mode
Red/PVR	Red / Netflix / Search
Green/V-Format	Green / APP / Repeat
Yellow/Aspect	Yellow / YouTube / Repeat
	Blue / Prime Video / Random

Original	Rechange





Original		Rechange		Original		Rechange	
	Power		Power		Vol+		Vol+
	Sub-T		Subtitle / EQ		FAV		Fav / Marker / PC
	Lang		Audio / Lang I/II		Down/CH-		Down
	Mute		Mute / Dimmer		Tv/Radio		TV/Radio /
	EPG		Guide / EPG / -/--		1		1
	Goto		Shift + Text /		2		2
	Page+		CH+ / Page+		3		3
	TTX		Text / Goto		Recall		Back / Return
	Repeat		Shift + Green / APP /		4		4
	Page-		CH- / Page-		5		5
	Menu		Menu / Home		6		6
	Up/CH+		Up		Info		Info / Angle
	Exit		Exit / Cancel / Clear		7		7
	Left		Left		8		8
	Vol-		Vol-		9		9
	OK		OK		0		0
	Right		Right		<<		<< / Tune-



