



Original	Rechange
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV	 TV/Radio /
 0	 0
 Recall	 Shift + Back / Return
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+

Original	Rechange
 Vol-	 Vol-
 World/Internet	 Smart / List
 PR-	 CH- / Page-
 Menu	 Menu / Home
 Q.Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 i	 Info / Angle
 Camera/Music/Ph	 Picture / Format
 Guide	 Guide / EPG / -/-
 */o	 Shift + Guide / EPG / -/-
 */o..	 Fav / Marker / PC





Original	Rechange
[≡]/Text	GOTO TEXT Text / Goto
Red	NETFLIX SEARCH Red / Netflix / Search
Green	APP REPEAT Green / APP / Repeat
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
Blue	Prime Video RANDOM Blue / Prime Video / Random
LANG.	LANG I/II AUDIO Audio / Lang I/II
[≡]..	SHIFT + GOTO TEXT Shift + Text /
[-o-]	OPT-TOOLS SETUP Setup / OPT /
<<	TUNE- << / Tune-
Pause	STEP-FREEZE Pause / Step / Freeze
>>	TUNE+ >> / Tune+
Rec	REC MODE Rec / Rec Mode
Play	SLOW Play / Slow
Stop	HOLD Stop / Hold

Original	Rechange

