





 

 

 



 

 



 









 







 

 



 

 





Original	Rechange
 Power	 Power
 Rec	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 I<<	 I<< / Preset-
 Green/[ ]	 Green / APP / Repeat
 Stop	 Stop / Hold
 Yellow	 Yellow / YouTube / Repeat
 Play/[≡]	 Play / Slow
 Blue/[■]	 Blue / Prime Video / Random
 >>I	 >>I / Preset+
 AV/[?]	 AV / Input / RDS
 I-II/[≡≡]	 Audio / Lang I/II
 [<>]/[+]	 Picture / Format
 [-S-]	 Zoom / Size
 Menu	 Menu / Home
 [≡]	 Text / Goto
 Pause	 Pause / Step / Freeze

Original	Rechange
 Left	 Left
 Up	 Up
 Right	 Right
 OK	 OK
 Down	 Down
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-
 Smart ♪	 Sound / Title
 P-	 CH- / Page-
 Smart [ ]	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5



 
 

 
 
 
 
 
 

 
 
 
 
 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 


Original		Rechange	
	6		6
	7		7
	8		8
	9		9
	[i+]		Info / Angle
	0		0
	P<P		Fav / Marker / PC

Original		Rechange	





Original	Recharge
	 Eject / Surround
	 Subtitle / EQ
	 Power
	 Rec / Rec Mode
	 I<< / Preset-
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Stop / Hold
	 Play / Slow
	 Yellow / YouTube / Repeat
	 >>I / Preset+
	 AV / Input / RDS
	 Audio / Lang I/II
	 Zoom / Size
	 Picture / Format
	 Menu / Home
	 Pause / Step / Freeze

Original	Recharge
	 Text / Goto
	 Left
	 Up
	 Right
	 OK
	 Down
	 Vol+
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-
	 Sound / Title
	 CH- / Page-
	 Smart / List
	 1
	 2
	 3
	 4











 

 

 

 

 

 







 



 





 



 



 

 







 

 





 
 


Original	Rechange
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [i+]	 Info / Angle
 0	 0
 P<P	 Fav / Marker / PC

Original	Rechange





Original	Rechange	Original	Rechange
	Power		Power
	-0-		Subtitle / EQ
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	AV/[?]		AV / Input / RDS
	I-II/[≡ ≡]		Audio / Lang I/II
	[<>]/[+]		Zoom / Size
	Pause		Pause / Step / Freeze
	[≡]		Text / Goto
	Left		Left
	Up		Up
	Right		Right
	OK		OK
	Down		Down
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	Smart J		Sound / Title
	P-		CH- / Page-
	Smart [ ]		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P<P		Fav / Marker / PC

