



 



























 

 

 



































| Original | | Rechange | | Original | | Rechange | |
|---|----------|---|------------------------|---|---------|---|-----------------------|
|  | Power |  | Power |  | Up |  | Up |
|  | EPG |  | Guide / EPG / -/-- |  | Display |  | Display / Media |
|  | REP |  | TV/Radio / |  | Left |  | Left |
|  | Mute |  | Mute / Dimmer |  | OK |  | OK |
|  | Rec List |  | Shift + Rec / Rec Mode |  | Right |  | Right |
|  | CH List |  | Smart / List |  | Menu |  | Menu / Home |
|  | Subtitle |  | Subtitle / EQ |  | Down |  | Down |
|  | Eject |  | Eject / Surround |  | Exit |  | Exit / Cancel / Clear |
|  | Rec |  | Rec / Rec Mode |  | 1 |  | 1 |
|  | Stop |  | Stop / Hold |  | 2 |  | 2 |
|  | I<< |  | I<< / Preset- |  | 3 |  | 3 |
|  | >>I |  | >>I / Preset+ |  | 4 |  | 4 |
|  | Pause |  | Pause / Step / Freeze |  | 5 |  | 5 |
|  | Play |  | Play / Slow |  | 6 |  | 6 |
|  | << |  | << / Tune- |  | 7 |  | 7 |
|  | >> |  | >> / Tune+ |  | 8 |  | 8 |
|  | Source |  | AV / Input / RDS |  | 9 |  | 9 |





| Original | | Rechange | | Original | | Rechange | |
|---------------|----------------|--------------------|-----------------------------|--------------|----------------|-----------------------|-------------------------|
| 0 | 0 | HDMI - BAT 0 | 0 | REVEAL TITLE | Title / Reveal | SHIFT + TITLE SOUND | Shift + Sound / Title |
| ↶ | Recall | RETURN BACK | Back / Return | PRO | PRO | SHIFT + MEDIA DISPLAY | Shift + Display / Media |
| FAV | Fav | PC FAV MARKER | Fav / Marker / PC | HOLD LAN | LAN / Hold | SHIFT + LIST SMART | Shift + Smart / List |
| ▲ VOL | Vol + | + VOL | Vol+ | SIZE A-B | Size / A-B | SIZE ZOOM | Zoom / Size |
| PICTURE | Picture | FORMAT PICTURE | Picture / Format | SUBPAGE GOTO | Goto / Subpage | GOTO TEXT | Text / Goto |
| NICAM/A2 | Nicam / A2 | LANG / I/I AUDIO | Audio / Lang I/II | INDEX SLOW | Index / Slow | ANGLE INFO | Info / Angle |
| ▲ CH | CH + | + CH PAGE | CH+ / Page+ | | | | |
| ▼ VOL | Vol - | - VOL | Vol- | | | | |
| SOUND | Sound | TITLE SOUND | Sound / Title | | | | |
| SLEEP | Sleep | TIMER SLEEP | Sleep / Timer | | | | |
| ▼ CH | CH - | - CH PAGE | CH- / Page- | | | | |
| Red | Red | NETFLIX SEARCH | Red / Netflix / Search | | | | |
| Green | Green | APP REPEAT | Green / APP / Repeat | | | | |
| Yellow | Yellow | YouTube REPEAT A-B | Yellow / YouTube / Repeat | | | | |
| Blue | Blue / Screen | Prime Video RANDOM | Blue / Prime Video / Random | | | | |
| TV/TXT SETUP | Setup / TV/Txt | OPT-TOOLS SETUP | Setup / OPT / | | | | |
| CANCEL D-MENU | D-Menu / | TOP MENU D.MENU | D.Menu / Top | | | | |

Cancel

Menu

