







 
 
 
 
 









 




Original	Rechange
 Power	 Power
 CBL/SAT	 0
 Media Player	 Guide / EPG / -/--
 Blu-ray/DVD	 2
 Game	 Fav / Marker / PC
 AUX	 7
 Tuner	 6
 Phono	 5
 TV Audio	 1
 CD	 3
 USB	 8
 Bluetooth	 9
 Internet Radio	 4
 Heos	 Smart / List
 CH+	 CH+ / Page+
 ECO	 Zoom / Size
 Volume+	 Vol+

Original	Rechange
 CH-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Info	 Info / Angle
 Option	 Menu / Home
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Setup	 Setup / OPT /
 I<</Tune-	 I<< / Preset-
 I<</Tune-	 << / Tune-
 Play/Pause	 Play / Slow
 >>I/Tune+	 >>I / Preset+
 >>I/Tune+	 >> / Tune+









 

 



 

 

 



 










































 


	Original	Recharge
	Band	 Display / Media
	Stop/Mode	 Stop / Hold
	Memory	 Eject / Surround
	Smart Select 1	 Red / Netflix / Search
	Smart Select 2	 Green / APP / Repeat
	Smart Select 3	 Yellow / YouTube / Repeat
	Smart Select 4	 Blue / Prime Video / Random
	Speaker	 Subtitle / EQ
	Sleep	 Sleep / Timer
	Dimmer	 +  Shift + Mute / Dimmer
	Sound Mode	 Sound / Title

	Original	Recharge





 







Original	Rechange
 Power	 Power
 CBL/SAT	 0
 Media Player	 Guide / EPG / -/--
 Blu-ray/DVD	 2
 Game	 Fav / Marker / PC
 AUX	 7
 Tuner	 6
 Phono	 5
 TV Audio	 1
 CD	 3
 USB	 8
 Bluetooth	 9
 Internet Radio	 4
 Heos	 Smart / List
 CH+	 CH+ / Page+
 Volume+	 Vol+
 CH-	 CH- / Page-

Original	Rechange
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 I<</Tune-	 I<< / Preset-
 I<</Tune-	 << / Tune-
 Play/Pause	 Play / Slow
 >>I/Tune+	 >>I / Preset+
 >>I/Tune+	 >> / Tune+
 Band	 Display / Media
 Stop/Mode	 Stop / Hold
 Memory	 Eject / Surround
 Smart Select 1	 Red / Netflix / Search





	Original	Rechange	Original	Rechange
	Smart Select 2	 Green / APP / Repeat		
	Smart Select 3	 Yellow / YouTube / Repeat		
	Smart Select 4	 Blue / Prime Video / Random		
	Sleep	 Sleep / Timer		

