



Original	Rechange	Original	Rechange
	Power		Power
	Open / Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Display		Info
	+10		Guide
	Vol-		Vol -
	Vol+		Vol +
	Mute		Mute
	DVD Menu		D. Menu
	Setup		Menu
	I<<		I<<
	>>I		>>I
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	<<		<<
	>>		>>
	Play		Play
	Pause / Step		Pause
	Slow		Rec
	Stop		Stop
	Program		Sleep
	Subtitle		Subt





Original	Recharge
Cancel	Exit
Search	TV/R
PAL-MUL-NT	Format
Angle	Smart
Repeat	Text
Audio	Dual
Zoom	Shift + Eject
A-B	Shift + Text

Original	Recharge

