




 










Original	Recharge
 Power	 Power
 <<<	 << / Tune-
 Play/Archiv	 Play / Slow
 >>>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Pause/Timeshift	 Pause / Step / Freeze
 Stop	 Stop / Hold
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/Input	 0

Original	Recharge
 Red	 Red / Netflix / Search
 Vol+	 Vol+
 P+	 CH+ / Page+
 Green	 Green / APP / Repeat
 Up	 Up
 Yellow	 Yellow / YouTube / Repeat
 Left	 Left
 OK	 OK
 Right	 Right
 Blue	 Blue / Prime Video / Random
 Down	 Down
 White/F	 Info / Angle
 Vol-	 Vol-
 P-	 CH- / Page-
 Mute	 Mute / Dimmer
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear





	Original	Recharge	Original	Recharge
	Text	Text / Goto		
	EPG	Guide / EPG / -/--		
	Home	Menu / Home		

