








Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 PIP	 Smart / List
 4	 4
 5	 5
 6	 6
 [<>]	 Picture / Format
 7	 7
 8	 8
 9	 9
 -/--	 Guide / EPG / -/--
 0	 0
 Mute	 Mute / Dimmer
 i	 Info / Angle
 Z	 Menu / Home

Original	Rechange
 P+	 CH+ / Page+
 P+	 Up
 -	 Left
 -	 Vol-
 OK	 OK
 +	 Right
 +	 Vol+
 TXT	 Text / Goto
 P-	 CH- / Page-
 P-	 Down
 AV	 AV / Input / RDS
 Scan/[]	 Setup / OPT /
 PAP/PAUSE	 Display / Media
 SIZE/STOP	 Zoom / Size
 POS/PLAY	 D.Menu / Top
 Red/ <	 Red / Netflix / Search
 Green/>	 Green / APP / Repeat











 









 



 

 



















 



 









 

 

 







Original	Recharge	Original	Recharge
Yellow/Pause/<	Yellow / YouTube / Repeat		
Blue/>>	Blue / Prime Video / Random		
























 

 








Original	Rechange	Original	Rechange
	Power		Power
	1		1
	2		2
	3		3
	PIP		Smart / List
	4		4
	5		5
	6		6
	[<>]		Picture / Format
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	i		Info / Angle
	Z		Menu / Home
	P+		CH+ / Page+
	P+		Up
	-		Left
	-		Vol-
	OK		OK
	+		Right
	+		Vol+
	TXT		Text / Goto
	P-		CH- / Page-
	P-		Down
	AV		AV / Input / RDS
	Scan/[']		Setup / OPT /
	PAP/Pause		Pause / Step / Freeze
	Size/Stop		Stop / Hold
	Pos/Play		Play / Slow
	Red/ <		<< / Preset-
	Green/>		>> / Preset+
	Yellow/Pause/<		<< / Tune-





Original	Recharge
 Power	 Power
 1	 1
 2	 2
 3	 3
 PIP	 Smart / List
 4	 4
 5	 5
 6	 6
 [<>]	 Picture / Format
 7	 7
 8	 8
 9	 9
 -/--	 Guide / EPG / -/--
 0	 0
 Mute	 Mute / Dimmer
 i	 Info / Angle
 Z	 Menu / Home

Original	Recharge
 P+	 CH+ / Page+
 P+	 Up
 -	 Left
 -	 Vol-
 OK	 OK
 +	 Vol+
 +	 Right
 TXT	 Text / Goto
 P-	 CH- / Page-
 P-	 Down
 AV	 AV / Input / RDS
 Scan/[]	 Setup / OPT /
 PAP/Pause	 Pause / Step / Freeze
 Size/Stop	 Stop / Hold
 Pos/Play	 Play / Slow
 Red/I<	 I<< / Preset-
 Green/>I	 >>I / Preset+

























 

















 
 


















 









Original	Recharge
Yellow/ <<	<< / Tune-
Blue/ >>	>> / Tune+

Original	Recharge







Original	Rechange	Original	Rechange
	Power		Power
	1		1
	2		2
	3		3
	PIP		Smart / List
	4		4
	5		5
	6		6
	[<>]		Picture / Format
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	i		Info / Angle
	Z		Menu / Home
	P+		CH+ / Page+
	P+		Up
	-		Vol-
	-		Left
	OK		OK
	+		Vol+
	+		Right
	TXT		Text / Goto
	P-		CH- / Page-
	P-		Down
	AV		AV / Input / RDS
	Scan/[']		Setup / OPT /
	PAP/Pause		Pause / Step / Freeze
	Size/Stop		Stop / Hold
	Pos/Play		Play / Slow
	Red/I<		I<< / Preset-
	Green/>I		>>I / Preset+
	Yellow/Pause/<		<< / Tune-





Original	Recharge
 Blue/>>>	 >> / Tune+

Original	Recharge

