






 
 















Original	Recharge	Original	Recharge
	On		Power
	Off		Shift + Power
	CH+		CH+ / Page+
	Mute		Mute / Dimmer
	Vol+		Vol+
	CH-		CH- / Page-
	Surr Mode		Smart / List
	Vol-		Vol-
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Info		Info / Angle
	Down		Down
	RTN		Back / Return
	IN 1		1
	IN 2		2
	IN 3		3
	IN 4		4
	IN 5		5
	IN 6		6
	IN 7		7
	IN 8		8
	IN 9		9
	+10		Guide / EPG / -/-
	IN 0		0
	Test		Text / Goto
	SPK A		Red / Netflix / Search
	SPK B		Green / APP / Repeat
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	Play		Play / Slow

 










 











 






 
















 



 

 





 









Original	Recharge	Original	Recharge
 >>	 >> / Tune+		
 Channel Volume Surr+	 +  Shift + CH+ /		
 Channel Volume Cent+	 +  Shift + Right		
 Channel Volume	 +  Shift + Up		
 Channel Volume Surr-	 +  Shift + CH- /		
 Channel Volume Cent -	 +  Shift + Left		
 Channel Volume	 +  Shift + Down		

 










 











 














Original	Rechange	Original	Rechange
 On	 Power	 3	 3
 Off	 Shift + Power	 4	 4
 >>	 >> / Preset+	 5	 5
 Mute	 Mute / Dimmer	 6	 6
 Vol+	 Vol+	 7	 7
 <<	 << / Preset-	 8	 8
 Rand	 Red / Netflix / Search	 9	 9
 Vol-	 Vol-	 +10	 Guide / EPG / -/-
 Up	 Up	 0	 0
 Menu	 D.Menu / Top	 Prog	 TV/Radio /
 Left	 Left	 Clear	 Blue / Prime Video / Random
 Enter	 OK	 RPT	 Green / APP / Repeat
 Right	 Right	 Stop	 Stop / Hold
 Disp	 Display / Media	 Pause	 Pause / Step / Freeze
 Down	 Down	 <<	 << / Tune-
 1	 1	 Play	 Play / Slow
 2	 2	 >>	 >> / Tune+





Original	Recharge
 On	 Power
 Off	 Shift + Power
 Preset+	 >>I / Preset+
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Preset-	 I<< / Preset-
 Vol-	 Vol-
 Up	 Up
 Tuner Mode	 Smart / List
 Left	 Left
 Enter	 OK
 Right	 Right
 Info	 Info / Angle
 Down	 Down
 1	 1
 2	 2
 3	 3

Original	Recharge
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AM/FM/DB	 Play / Slow
 0	 0
 << Scan Tune	 << / Tune-
 Tune Scan >>	 >> / Tune+

