



Original	Rechange
Power	Power
Repeat	Green / APP / Repeat
A-B	Yellow / YouTube / Repeat
Open/Close	Eject / Surround
N/P	Blue / Prime Video / Random
Subtitle	Subtitle / EQ
Angle	Info / Angle
Language	Audio / Lang I/II
Setup	Setup / OPT /
Title	Sound / Title
1	1
2	2
3	3
4	4
5	5
6	6
7	7

Original	Rechange
8	8
9	9
Time	Sleep / Timer
0	0
10+	Guide / EPG / -/-
Up	Up
PBC	D.Menu / Top
Down	Down
Right	Right
Left	Left
Enter	OK
Menu	Menu / Home
Vol+	Vol+
Vol-	Vol-
Zoom	Zoom / Size
Return	Back / Return
L/R	Smart / List





Original	Recharge	Original	Recharge
	Step		Shift + Pause / Step /
	Slow		Shift + Play /
	Program		TV/Radio /
	Clear		Exit / Cancel / Clear
	Mute		Mute / Dimmer
	Display		Display / Media
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	V-Mode		Picture / Format
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze

