









 











 



 







 



 



 



 



 


 
















 
 

 


 


 

 

 

 




Original		Rechange		Original		Rechange	
	Power		Power		3D		Shift + 3
	1		1		?		Info / Angle
	2		2		@		D.Menu / Top
	3		3		Menu		Menu / Home
	4		4		Up		Up
	5		5		←		Back / Return
	6		6		Left		Left
	7		7		OK		OK
	8		8		Right		Right
	9		9		Tools		Setup / OPT /
	FAV		Fav / Marker / PC		Down		Down
	0		0		Guide/Home		Guide / EPG / -/--
	TXT		Text / Goto		Guide/Home		Smart / List
	Red		Red / Netflix / Search		Vol+		Vol+
	Green		Green / APP / Repeat		Source		AV / Input / RDS
	Yellow		Yellow / YouTube / Repeat		PR+		CH+ / Page+
	Blue		Blue / Prime Video / Random		Vol-		Vol-





Original	Rechange
	 Mute / Dimmer
	 CH- / Page-
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+
	 Rec / Rec Mode
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Display / Media
	 Audio / Lang I/II
	 Subtitle / EQ

Original	Rechange

