

































 

 

 

 

 

 

 

 

 



 





 

 









Original	Rechange
 Standby	 Power
 1/VCR/DVR	 1
 2/CBL/SAT	 2
 3/Game/TV	 3
 4/AUX	 4
 5/Multi CH	 5
 6/DVD	 6
 7/Tape	 7
 8/Tuner	 8
 9/CD	 9
 +10/10/-/-/D.Tun	 Guide / EPG / -/-
 0/11/Dimmer	 0
 CLR/12/Sleep/Ent	 Fav / Marker / PC
 CH Disc	 CH+ / Page+
 CH Disc Album-	 CH- / Page-
 Vol+	 Vol+
 Vol-	 Vol-

Original	Rechange
 Up	 Up
 Previous Menu/Muting	 Menu / Home
 Left/Playlist/Cat	 Left
 Enter	 OK
 Right/Playlist/Cat	 Right
 Setup	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Pause/<	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 Stereo	 Sound / Title
 Surround	 Eject / Surround
 < Listening Mode	 Shift + Left
 Listening Mode >	 Shift + Right





Original	Rechange	Original	Rechange
 Standby	 Power	 Enter	 OK
 1/VCR/DVR	 1	 Right/Playlist/Cat	 Right
 2/CBL/SAT	 2	 Setup	 Setup / OPT /
 3/Game/TV	 3	 Down	 Down
 4/AUX	 4	 Return	 Back / Return
 5/Multi CH	 5	 Pause/<	 Pause / Step / Freeze
 6/DVD	 6	 Play	 Play / Slow
 7/Tape	 7	 Stop	 Stop / Hold
 8/Tuner	 8	 <<	 << / Tune-
 9/CD	 9	 >>	 >> / Tune+
 +10/10/-/-/D.Tun	 Guide / EPG / -/-	 <<	 << / Preset-
 0/11/Dimmer	 0	 >>	 >> / Preset+
 CLR/12/Sleep/Ent	 Fav / Marker / PC	 Stereo	 Sound / Title
 Guide/Top	 D.Menu / Top	 Surround	 Eject / Surround
 Up	 Up	 < Listening Mode	 CH- / Page-
 Previous Menu/Muting	 Menu / Home	 Listening Mode >	 CH+ / Page+
 Left/Playlist/Cat	 Left	 Test Tone/Audio	 Audio / Lang I/II



 

 




Original		Rechange		Original		Rechange	
	CH Sel/Subtitle		Smart / List				
	Level-/Random		Blue / Prime Video / Random				
	Level+/Repeat		Green / APP / Repeat				
	Display		Display / Media				
	Play Mode VCR		AV / Input / RDS				
	L.Night/DVD		Sleep / Timer				
	Cine FLTR/HDD		TV/Radio /				





Original		Rechange		Original		Rechange	
	Standby		Power		Pause / <		Pause / Step / Freeze
	1/VCR/DVR		1		Play		Play / Slow
	2/CBL/SAT		2		Stop		Stop / Hold
	3/Game/TV		3		<<		<< / Tune-
	4/AUX		4		>>		>> / Tune+
	5/Multi CH		5		I<<		I<< / Preset-
	6/DVD		6		>>I		>>I / Preset+
	7/Tape		7		Stereo		Audio / Lang I/II
	8/Tuner		8		Surround		Eject / Surround
	9/CD		9		< Listening Mode		Left
	+10/10/-/-/D.Tun		Guide / EPG / -/-		Listening Mode >		Right
	0/11/Dimmer		0		Level-/Random		Blue / Prime Video / Random
	CLR/12/Sleep/Ent		Fav / Marker / PC		Level+/Repeat		Green / APP / Repeat
	Disc/Album		CH+ / Page+		Display		Display / Media
	Disc/Album CH-		CH- / Page-				
	Vol+		Vol+				
	Vol-		Vol-				





Original	Rechange
Standby	Power
1/VCR/DVR	1
2/CBL/SAT	2
3/Game/TV	3
4/AUX	4
5/Multi CH	5
6/DVD	6
7/Tape	7
8/Tuner	8
9/CD	9
+10/10/-/-/D.Tun	Guide / EPG / -/-
0/11/Dimmer	0
Disc/Album	CH+ / Page+
Disc/Album CH-	CH- / Page-
Pause/<	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold

Original	Rechange
<<	<< / Tune-
Stereo	Audio / Lang I/II
Surround	Eject / Surround
< Listening Mode	Left
Listening Mode >	Right
Play Mode/VCR	OK
L.Night/DVD	Sleep / Timer

