






 


 
 


















 




















Original	Recharge
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Cancel	 Shift + Exit / Cancel / Clear
 Audio	 Audio / Lang I/II
 Open/Close	 Eject / Surround
 PIP	 Picture / Format
 Internet	 Smart / List
 Audio	 Sound / Title

Original	Recharge
 << Search	 << / Tune-
 Play	 Play / Slow
 Search >>	 >> / Tune+
 I<< Skip	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 Skip >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Exit	 Exit / Cancel / Clear
 Status	 Info / Angle
 Option	 Setup / OPT /
 Return	 Back / Return
 Top Menu	 D.Menu / Top
 Home	 Menu / Home
 Pop-Up Menu	 Display / Media
 Up	 Up
 Down	 Down
 Right	 Right



Secondary



Original	Recharge
Left	Left
OK	OK
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Tv Vol+	Vol+
Power TV	Shift + Power
Tv Vol-	Vol-
AV Input TV	AV / Input / RDS

Original	Recharge

