 





 




















 



 







 

 

























 







 

 





Original	Recharge	Original	Recharge
 Power	 Power	 Mute	 Mute / Dimmer
 1	 1	 I<<	 I<< / Preset-
 2	 2	 >>I	 >>I / Preset+
 3	 3	 <<	 << / Tune-
 4	 4	 >>	 >> / Tune+
 5	 5	 Stop	 Stop / Hold
 6	 6	 Pause	 Pause / Step / Freeze
 7	 7	 Play	 Play / Slow
 8	 8	 Info	 Info / Angle
 9	 9	 Exit	 Exit / Cancel / Clear
 0	 0	 Media Center	 Display / Media
 P+	 CH+ / Page+	 Up	 Up
 P-	 CH- / Page-	 Home Menu	 Menu / Home
 Vol+	 Vol+	 Pop-Up Menu	 D.Menu / Top
 Vol-	 Vol-	 Down	 Down
 Open/Close	 Eject / Surround	 Left	 Left
 Guide	 Guide / EPG / -/-	 Right	 Right





Original	Recharge
 Ok	 OK
 Option	 Setup / OPT /
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Rec	 Rec / Rec Mode
 Text	 Text / Goto
 Sub	 Subtitle / EQ
 Radio	 TV/Radio /
 Rec Timer	 Sleep / Timer
 Rec List	 Smart / List
 Display Disc	 Shift + Display / Media
 Audio D))	 Sound / Title
 Format	 Picture / Format
 Audio oo	 Audio / Lang I/II

Original	Recharge
 Canal Play	 Fav / Marker / PC
 Viera CAST	 AV / Input / RDS
 Power Tv	 Shift + Power
 Vol+Tv	 Shift + Vol+
 Vol-Tv	 Shift + Vol-
 P+Tv	 Shift + CH+ /
 P-Tv	 Shift + CH- /
 Av Tv	 Shift + AV / Input / RDS

