





 

 


 
 
 

 

 

 


 




 


 



 



 

 

 

 

 


 


 

 

 


 



 

 


 








 



 




Original	Recharge	Original	Recharge
 Power	 Power	 Right	 Right
 Picture	 Format	 Left	 Left
 Input Tv	 TV/R	 OK	 Ok
 Input AV	 AV	 Red	 Red
 Menu	 Menu	 Green	 Green
 Text	 Text	 Yellow	 Yellow
 STTL	 Subt	 Blue	 Blue
 List/Provider	 List	 Vol+	 Vol +
 i	 Info	 Vol-	 Vol -
 Exit	 Exit	 Mute	 Mute
 Netflix	 Media	 CH+	 Ch +
 Home	 Smart	 CH-	 Ch -
 Guide	 Guide	 1	 1
 Option	 Options	 2	 2
 Back/Return	 Back	 3	 3
 Up	 Up	 4	 4
 Down	 Down	 5	 5

Original	Recharge	Original	Recharge
 Right	 Right	 TV	 AUX
 Left	 Left	 DVD	 MUTE
 OK	 Ok	 SAT	 SHIFT
 Red	 Red	 PLAY MODE	 REC MODE
 Green	 Green	 II	 ■
 Yellow	 Yellow	 ⏩	 ▶
 Blue	 Blue	 ⏪	 ⏏
 Vol+	 Vol +	 DISC NAV	 SOUND
 Vol-	 Vol -	 DUAL	 AD
 Mute	 Mute	 SUBT	 SETTINGS
 CH+	 Ch +	 LIST	 OPT
 CH-	 Ch -	 PROG SEARCH	 ECO
 1	 1	 PICTURE	 3D
 2	 2	 FORMAT	 TIMER
 3	 3	 3D	 AV
 4	 4	 E-MANUAL	 TOP MENU
 5	 5	 REPEAT	 DISPLAY INFO
		 ZOOM	 MENU
		 TEXT	 OK
		 AV	 BACK
		 TOP MENU	 CLEAR EXIT
		 MENU	 HOME
		 BACK	 SMART
		 HOME	 APP
		 SMART	 MEDIA
		 APP	 + VOL
		 MEDIA	 VOL -
		 + VOL	 + CH
		 VOL -	 CH -
		 + CH	 1
		 CH -	 2
		 1	 3
		 2	 4
		 3	 5
		 4	 6
		 5	 7
		 6	 8
		 7	 9
		 8	 0
		 9	 GUIDE
		 0	 PRE-CH
		 GUIDE	 A
		 PRE-CH	 B
		 A	 C
		 B	 D
		 C	
		 D	





	Original	Rechange		Original	Rechange
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	?/eHelp		Dual		
	Last View		Pre Ch		
	<<		<<		
	Play		Play		
	>>		>>		
	I<<		I<<		
	Pause		Pause		
	>>I		>>I		
	My APP		Shift + Media		
	Stop		Stop		
	Rec		Rec		

	Original	Rechange

