




 

 















 




 
 





 




















 

 
 
 

 







Original	Recharge
 Power	 Power
 Menu	 Menu / Home
 Picture	 Picture / Format
 Input Tv	 TV/Radio /
 Input AV	 AV / Input / RDS
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 i	 Info / Angle
 X/Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Option	 Setup / OPT /
 Down	 Down

Original	Recharge
 Back/Return	 Back / Return
 Netflix	 Shift + Red / Netflix /
 Home	 Shift + Menu /
 Guide	 Guide / EPG / -/-
 Mute	 Mute / Dimmer
 Text	 Text / Goto
 STTL	 Subtitle / EQ
 List/Provider	 Smart / List
 Vol+	 Vol+
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original		Recharge		Original	Recharge
	6		6		
	7		7		
	8		8		
	9		9		
	?/eHelp		D.Menu / Top		
	0		0		
	Recall		Fav / Marker / PC		
<< button"/>	<<		<< / Tune-		
	Play		Play / Slow		
>> button"/>	>>		>> / Tune+		
	I<<		I<< / Preset-		
	Pause		Pause / Step / Freeze		
>>I button"/>	>>I		>>I / Preset+		
	My APP		Shift + Green / APP /		
	Stop		Stop / Hold		
	Rec		Rec / Rec Mode		

