 

 
 
 

 
 
 
 

 

 
 
 
 
 
 
 
 
 







 
 






Original		Rechange	
	Power		Power
	CD		1
	Bluetooth/Pairing		2
	FM		3
	USB/Audio In		4
	I <<		I <<
	Play		Play
	Pause		Pause
	>> I		>> I
	Stop		Stop
	> <		Guide
	Recall		Pre Ch
	Album/Preset		Ch +
	Album/Preset		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

[illegible]