

 





 

 







 

 

 

 











 





 























 















Original	Recharge
 Power	 Power
 Ambilight	 D.Menu / Top
 Sources	 AV / Input / RDS
 Settings	 Setup / OPT /
 Top Picks	 Picture / Format
 Search	 TV/Radio /
 Exit/TV	 Exit / Cancel / Clear
 Tv Guide	 Guide / EPG / -/-
 Windows	 Display / Media
 List	 Smart / List
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 ←	 Back / Return
 +	 Info / Angle

Original	Recharge
 Home	 Menu / Home
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Netflix	 Shift + Red / Netflix / Search
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original		Recharge		Original		Recharge	
	7		7				
	8		8				
	9		9				
	Subtitle		Subtitle / EQ				
	0		0				
	Text		Text / Goto				
	Stop		Stop / Hold				
	Pause		Pause / Step / Freeze				
	Rec		Rec / Rec Mode				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				

