









 



 




































 




 



 

















Original		Rechange		Original		Rechange	
	Standby		Power		Stop		Stop / Hold
	1		1		Play/Pause		Play / Slow
	2		2		Play/Pause		Pause / Step / Freeze
	3		3		I>/Resume		Shift + Play /
	4		4		Surround		Eject / Surround
	5		5		Sound		Sound / Title
	6		6		Night		Shift + Sleep / Timer
	7		7		Mute		Mute / Dimmer
	8		8		Repeat		Green / APP / Repeat
	9		9		Repeat A-B		Yellow / YouTube / Repeat
	0		0		Sleep		Sleep / Timer
	Vol+		Vol+		DIM		Shift + Mute / Dimmer
	Vol-		Vol-		Subw +		Up
	Left		Left		Rear +		Shift + CH+ /
	Right		Right		Center +		CH+ / Page+
	I<<		I<< / Preset-		Tv Vol+		Shift + Vol+
	>>I		>>I / Preset+		Subw -		Down



 








 

Original	Recharge
 Rear -	 Shift + CH- /
 Center -	 CH- / Page-
 Tv Vol-	 Shift + Vol-

Original	Recharge







 

 







 

 

 

 

 







 



Original		Recharge	
	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Disc (DVD)		D.Menu / Top
	0		0
	Vol+		Vol+
	System (DVD)		Menu / Home
	Vol-		Vol-
	l<<		l<< / Preset-
	>>l		>>l / Preset+

Original		Recharge	
	Stop		Stop / Hold
	Play/Pause		Play / Slow
	l>/Resume		Shift + Play /







 





 



 

 

 





Original		Recharge		Original		Recharge	
	Standby		Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Up		Up				
	Left		Left				
	OK		OK				
	Right		Right				
	Down		Down				





Original		Recharge		Original		Recharge	
	Standby		Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				

