












Original		Rechange		Original		Rechange	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Source		AV / Input / RDS
	1		1		Up		Up
	2		2		Left		Left
	3		3		Enter		OK
	4		4		Right		Right
	5		5		Down		Down
	6		6		Exit		Exit / Cancel / Clear
	7		7		Display		Display / Media
	8		8		Vol+		Vol+
	9		9		MTS		Shift + Smart / List
	DTV/ATV		Shift + AV / Input / RDS		CH+		CH+ / Page+
	0		0		Vol-		Vol-
	Recall		Back / Return		Rec List/D.Setup		Setup / OPT /
	P.Mode		Picture / Format		Rec List/D.Setup		Smart / List
	S.Mode		Sound / Title		CH-		CH- / Page-
	Sleep		Sleep / Timer		Rec		Rec / Rec Mode





Original	Rechange
Open/Close	Eject / Surround
Play	Play / Slow
Pause/Timeshift	Pause / Step / Freeze
Stop/Freeze	Stop / Hold
<<<	<<< / Tune-
Guide	Guide / EPG / -/-
>>>	>>> / Tune+
Aspect	Shift + Picture / Format
I<<<	I<<< / Preset-
Tv/Radio	TV/Radio /
>>>I	>>>I / Preset+
FAV List	Fav / Marker / PC
Zoom/Index	Zoom / Size
Angle/Cancel	Shift + Exit / Cancel / Clear
Angle/Cancel	Info / Angle
Audio/Subpage	Audio / Lang I/II
Subtitle	Subtitle / EQ

Original	Rechange
D.Menu/Reveal	D.Menu / Top
Size/D.Title	Shift + Sound / Title
Size/D.Title	Shift + Zoom /
Goto/Hold	Shift + Stop /
Goto/Hold	Shift + Text /
Text/D.Display	Shift + Display / Media
Text/D.Display	Text / Goto
Red/Prog	Shift + TV/Radio / Program
Red/Prog	Red / Netflix / Search
Green/Step	Shift + Pause / Step /
Green/Step	Green / APP / Repeat
Yellow/Repeat	Yellow / YouTube / Repeat
Yellow/Repeat	Shift + Green / APP /
Cyan/A-B	Blue / Prime Video / Random
Cyan/A-B	Shift + Yellow / YouTube /

