




 









 

 






 












Original		Rechange		Original		Rechange	
	Power		Power		4		4
	Mute		Mute / Dimmer		5		5
	Play		Play / Slow		6		6
	Pause/[≡]		Pause / Step / Freeze		7		7
	Stop/[≡+]		Stop / Hold		8		8
	Rec/[≡◆]		Rec / Rec Mode		9		9
	<</[≡o]		<< / Tune-		*		Setup / OPT /
	<</[≡i]		<< / Preset-		0		0
	>> /[≡?]		>>  / Preset+		Up		Up
	>> /[≡x]		>> / Tune+		[→]		AV / Input / RDS
	Info		Info / Angle		Left		Left
	OI/II/Audio		Audio / Lang I/II		OK		OK
	[≡]		Text / Goto		Right		Right
	←/<x]		Fav / Marker / PC		Down		Down
	1		1		Netflix		Shift + Red / Netflix /
	2		2		You Tube		Shift + Yellow / YouTube /
	3		3		Vol+		Vol+









 









 









 



 


 


 





 



 






 




 



 







Original		Recharge		Original		Recharge	
	Home / Source		Menu / Home				
	P+		CH+ / Page+				
	Vol-		Vol-				
	P-		CH- / Page-				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	EPG		Guide / EPG / -/--				
	List		Smart / List				
	Q.Menu		D.Menu / Top				





Original		Rechange		Original		Rechange	
	Power		Power		4		4
	Mute		Mute / Dimmer		5		5
	Play		Play / Slow		6		6
	Pause [ /≡]		Pause / Step / Freeze		7		7
	Stop/[≡+]		Stop / Hold		8		8
	Rec/[≡◆]		Rec / Rec Mode		9		9
	<</[≡o]		<< / Tune-		*		Setup / OPT /
	<</[≡i]		<< / Preset-		0		0
	>> /[≡?]		>>  / Preset+		[→]		AV / Input / RDS
	>> /[≡x]		>> / Tune+		Up		Up
	Info		Info / Angle		Left		Left
	O) /II/Audio		Audio / Lang I/II		OK		OK
	[≡]		Text / Goto		Right		Right
	←/<x]		Fav / Marker / PC		Down		Down
	1		1		Netflix		Shift + Red / Netflix /
	2		2		YouTube		Shift + Yellow / YouTube /
	3		3		Vol+		Vol+





Original	Recharge	Original	Recharge
 Home/Source	 Menu / Home		
 P+	 CH+ / Page+		
 Vol-	 Vol-		
 P-	 CH- / Page-		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 EPG	 Guide / EPG / -/--		
 List	 Smart / List		
 Q.Menu	 D.Menu / Top		

